Dyson DC14 Brush Bar Replacement

This guide will teach you how to replace the brush bar in a Dyson DC14 vacuum cleaner.

Written By: Donald Percivalle

INTRODUCTION

The brush bar on the vacuum can wear with use. If your brush is scratching your floor, or not cleaning as well as it used to, then you may want to replace your brush bar.

TOOLS:

- Coin (1)
- Flathead 3/32" or 2.5 mm Screwdriver (1)

PARTS:

- Dyson DC14 Brush Bar (1)

Step 1 — Brush Bar

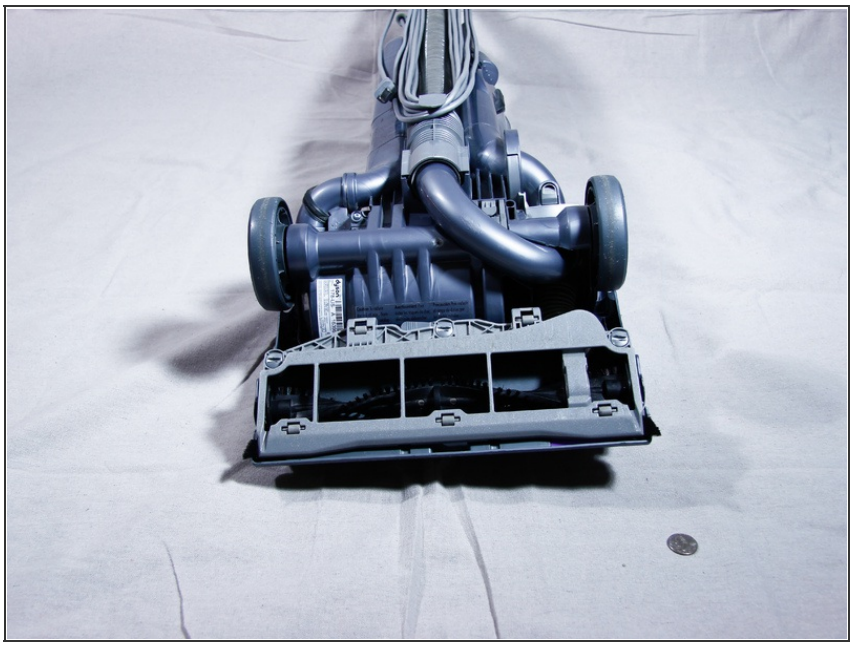

Turn off and unplug vacuum.

- Lay vacuum on its top so brush bar faces you.

Step 2

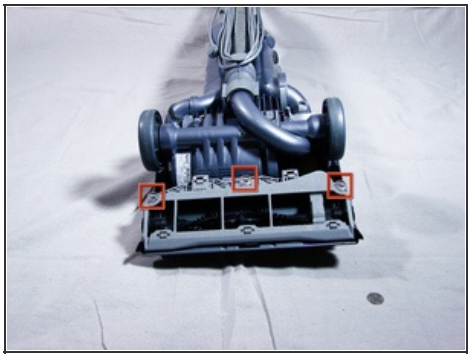

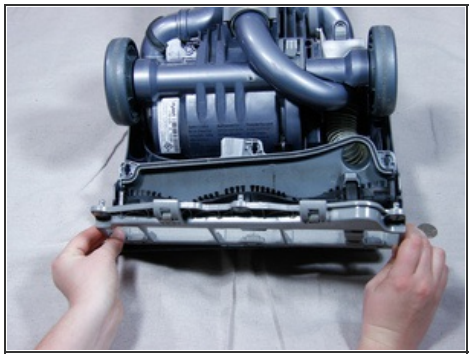

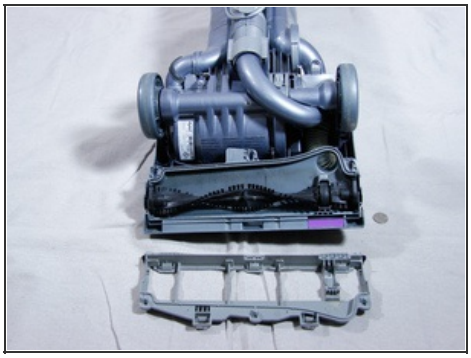

- Insert quarter into three fasteners and turn 90 degrees to the left.
- Grasp sole plate on on both sides, and lift top towards you to remove the sole-plate.

Step 3

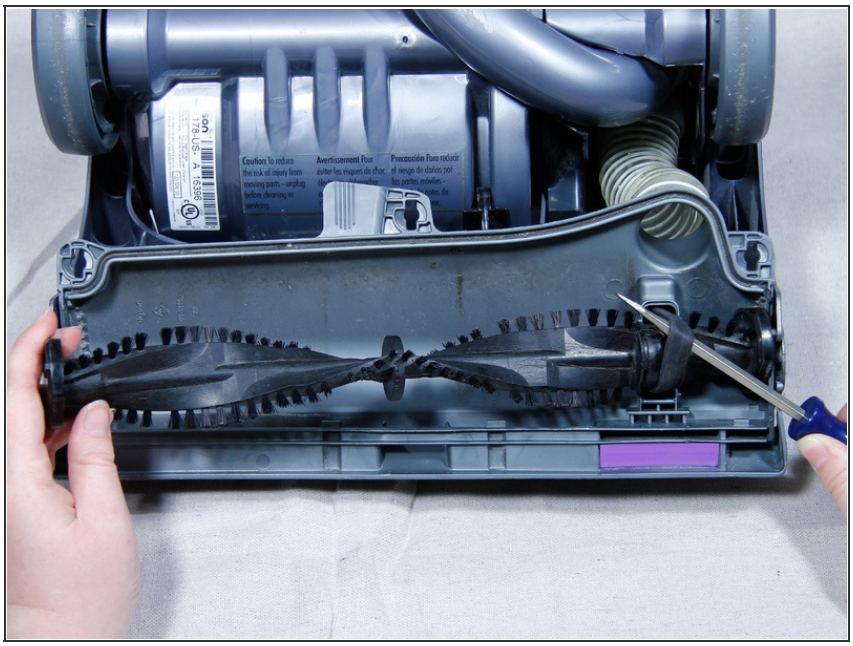

- Place flathead screwdriver under belt and lift the belt.

Do not cut belt with screwdriver.

Step 4

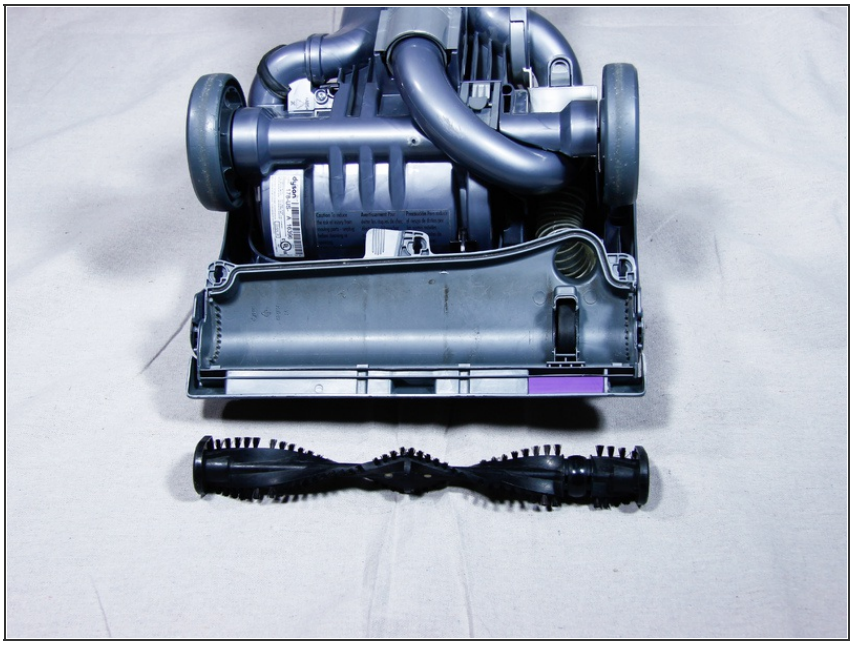

- Lift belt away from brush bar and work belt over the right side of the brush bar to remove it.

Let go of belt when free from brush bar. The belt will not retract into vacuum.

Replace axles flush on either side of the bar with the flat sides away from you when installing new brush bar.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2015-05-09 01:46:03 AM.